

Removing the drive head from the G53F, V1.1


Release the small black thumbscrew (top left in the photo).
Using a small Phillips screwdriver remove the cover from the roller.



Using a 2mm hex key remove the 2 retaining screws (M2,5x5). Apply a drop of Loctite 243 when assembling the unit.



Using a 4mm hex key force the spring clips out and at the same time, grab the motor cover, twist and pull it in small steps until it is free from the clips.

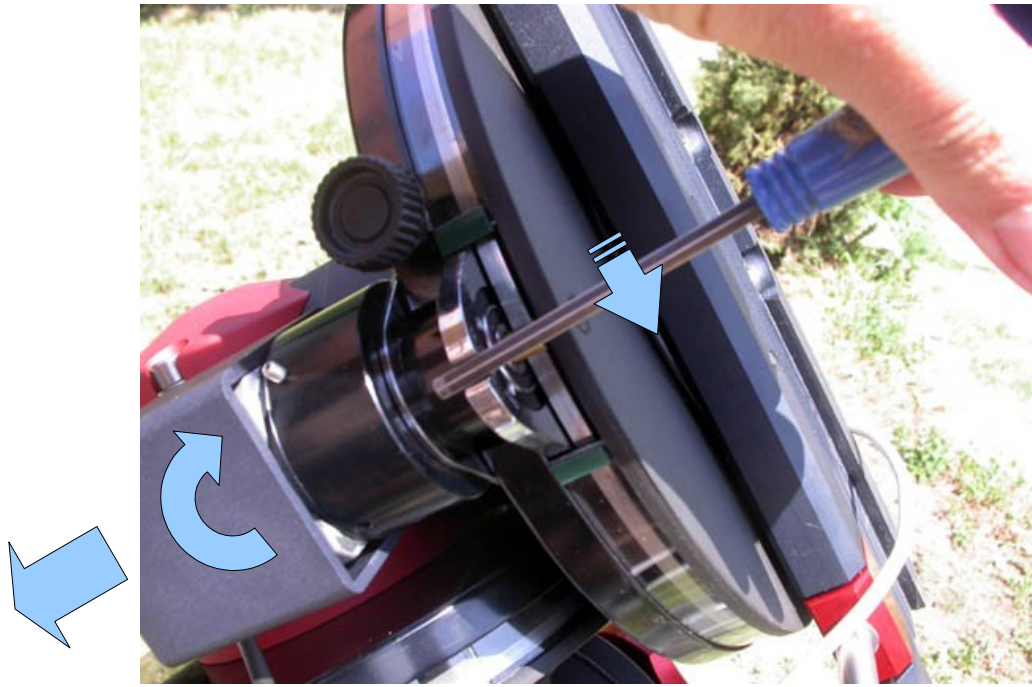

Installing the drive head is the reverse of removal. The retaining screws must face outwards and positioned symmetrically respect to the spring clip opening.

Gemini. 2011 06