


INSTRUCTION MANUAL

EQ8-R Mount

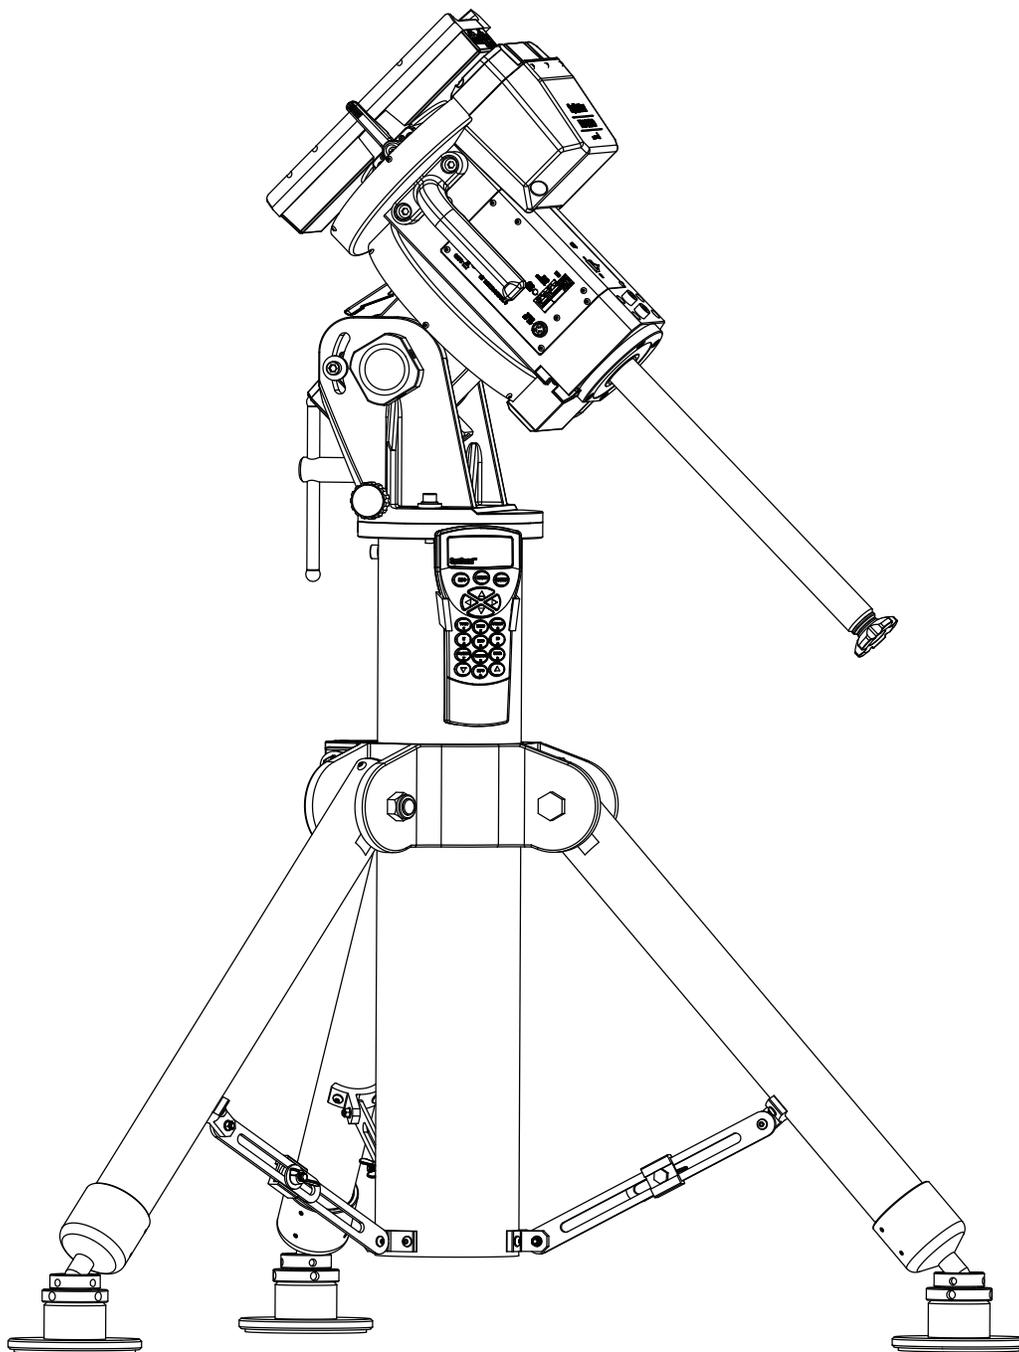

Apply to EQ8-R Series Mounts

EQ8R-V2

CONTENT

PART I : SETTING UP THE EQ8-R MOUNT

1.1 Setting Up the Tripod	4
1.2 Putting On the EQ8-R Mount	6
1.3 Installing the Counterweights	7
1.4 Installing the Telescope	7
1.5 Balancing the Mount Load	8

PART II : POLAR ALIGNMENT

2.1 Prepare the Mount for Polar Alignment	9
2.2 Based on Star Alignment	10
2.3 Based on Camera	10
2.4 Based on Polar Scope	10
2.5 Align the Polar Scope	12

PART III : ELECTRONIC CONTROL INTERFACE

3.1 Control Panel	14
3.2 Panel Interface Components	14
3.3 Pinout of the Interfaces	15
3.4 Power Supply Requirements	15
3.5 Cable Management System	15

PART IV : FEATURES OF THE EQ8-R MOUNT

4.1 SynScan Telescope Control System	16
4.2 Permanent Periodic Error Correction	16
4.3 Batch Exposures Function	16
4.4 Auto-Home Function	16
4.5 High Resolution Encoder	16
4.6 Hard Stops	16


APPENDIX

Dimensions	17
Specifications	18


EQ8-R Mount Packing List

Mount Package Includes:


EQ8-R Mount x 1

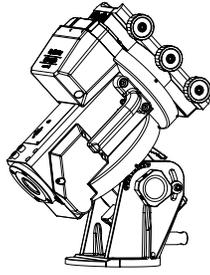


Instruction Manual x 2

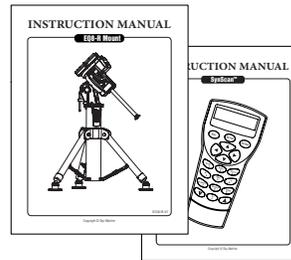


Azimuth Adjustment Knob x 2




Counterweight Shaft x 1



Jackscrew Handle x 1




Cable Clamp x 1

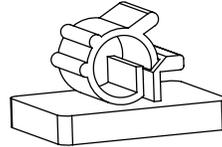


SynScan Hand Control V5 x 1




Power Cable x 1

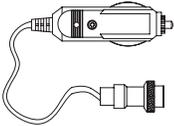

6 mm Allen Wrench x 1

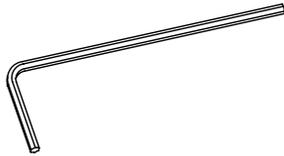

Shutter Release Cable (for Canon EOS) x 1




SynScan Hand Control Cable x 1




Tripod Package Includes:

Tripod x 1

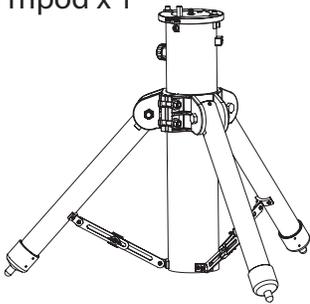

Counterweight x 2

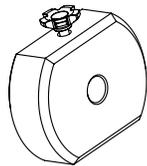


Wrench x 1




2.5 mm Allen Wrench x 1




Stand x 3

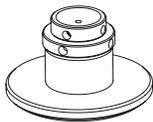

Screw x 3

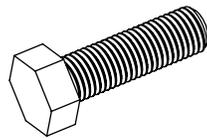


Washer x 3




Thumb Screw x 3




Slide Block x 3



M3X10 Allen Screw x 2



Hand Control Bracket x 1

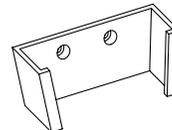

PART I : SETTING UP THE EQ8-R MOUNT

1.1 Setting Up the Tripod

1. Fully expand the tripod legs on level ground.
2. Install the hand control bracket on the tripod. (Fig 1.1a)
3. Place one or two counterweight(s) just between the bottom of the central post and the ground if there is enough space between them. This is a critical safety effort because the counter weight(s) will prevent users from accidentally putting their feet under the center pole. (Fig. 1.1b)

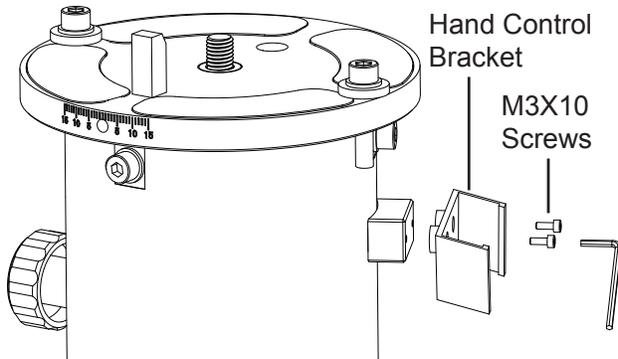


Fig. 1.1a

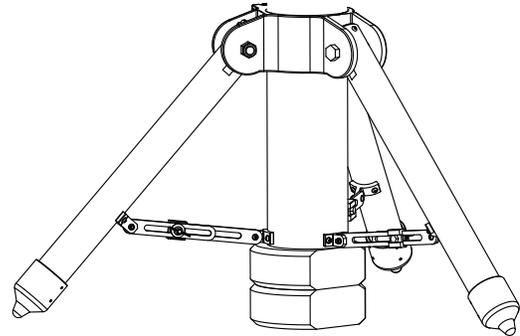


Fig. 1.1b

3. Fully release the clamp of the central post by loosening the two hex nuts on it with a 19mm hex wrench (Fig 1.1c).
 - The central post might fall freely when the two nuts are loosened. The counterweight(s), which is (are) placed between the bottom of the central post and the ground earlier, will support the central post and prevent any potential damages in this situation.
 - While loosening the two clamp nuts, to reduce the possible impact of the the central post falling, it is recommended to hold the tripod top, or to fill the gap between the top of the counter weight and the bottom of central post with some soft material.
 - User should loosen the two hex nuts alternately to make sure both of them are fully loosened.

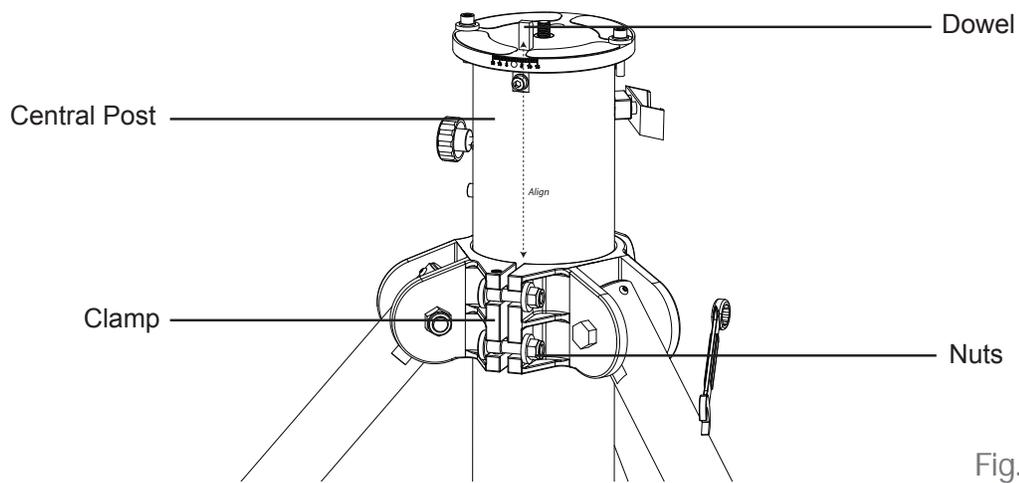


Fig. 1.1c

4. After the clamp is fully released, rotate the central post in the clamp to roughly align the dowel on the tripod top with the gap of the clamp. (Fig 1.1c)

5. Assemble the 3 adjustable spider trusses as shown in Fig 1.1d and Fig 1.1e. Do not tighten the thumb screws at this moment.

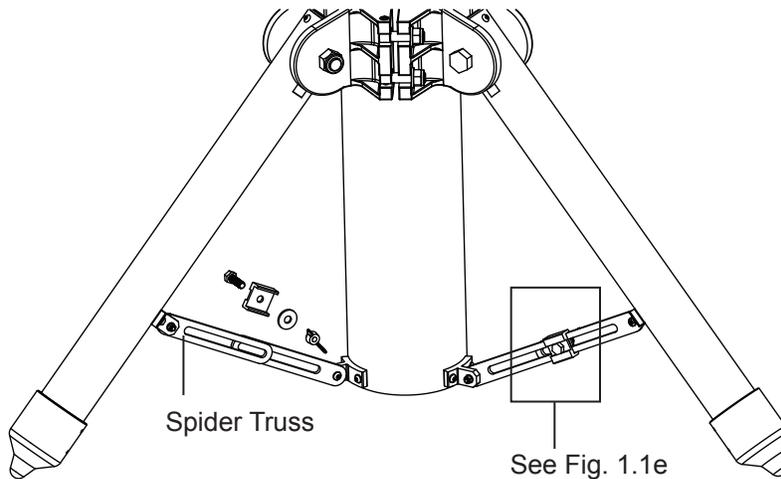


Fig. 1.1d

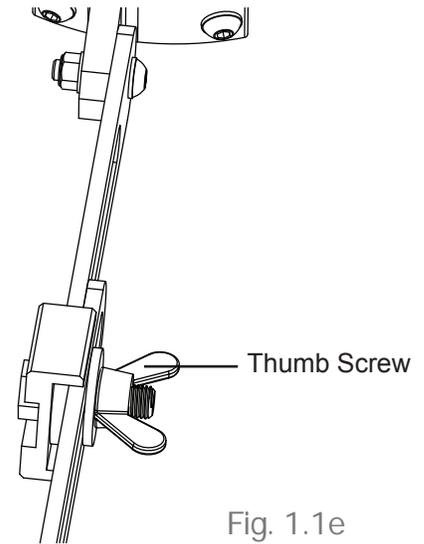


Fig. 1.1e

6. Slide the central post up/down in the clamp (Fig. 1.1c) to the proper height and then tighten the 3 thumb screws on the spider trusses to prevent the central post from falling.
7. Tighten both hex nuts on the clamp to secure the central post in the clamp. The two nuts **MUST** be tightened in an alternate manner to avoid damage to the clamp. Do not over tighten the two nuts.
8. The tripod can be placed directly on a level ground, or it can be placed on the 3 adjustable stands as shown in Fig 1.1f.
 - Put the tips of the tripod on the three adjustable stands.
 - Turn the leveling screw to raise/lower a leg.
 - Tighten the locking ring when the tripod top is leveled. (Fig. 1.1d).
 - The small holes at the side of the leveling screw and the locking ring can accept a metal bar for turning the screw and the ring.


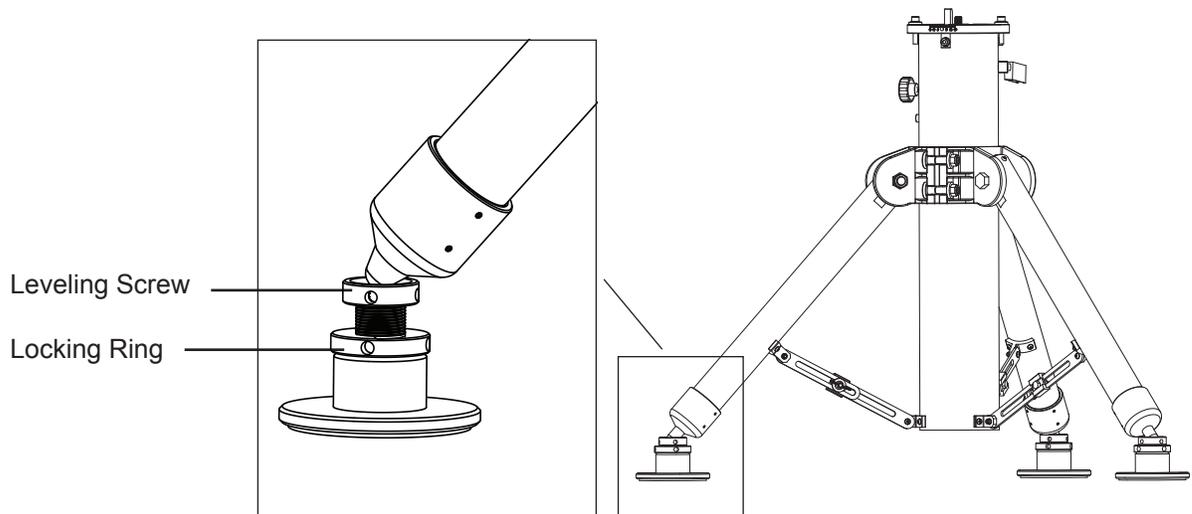


Fig. 1.1f

1.2 Putting On the EQ8-R Mount

1. Loosen the two azimuth adjustment knobs on the EQ8-R mount until there is sufficient space between the two knob screws (Fig. 1.2a). Remove the two azimuth locking screws and washers on the tripod top.
2. Align the metal dowel on the tripod top with the gap between the two azimuth adjustment knobs; and then put the mount on the tripod top. (Fig 1.2b)

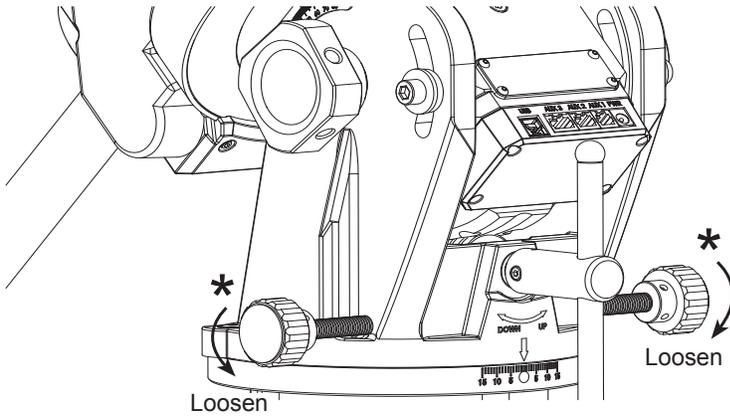

* Azimuth Adjustment Knobs Fig. 1.2a

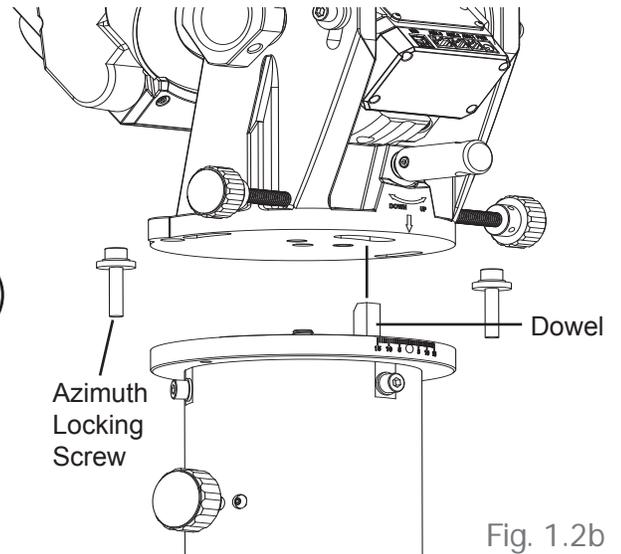


Fig. 1.2b

3. Apply the two azimuth locking screws with washers to slightly fix the mount on the tripod top. (Fig. 1.2c). Do not tighten these screws yet.
4. Turn the primary locking knob in clockwise direction to engage the primary locking shaft to the threaded hole at the center of the mount's bottom. Turn the knob until it is tightened. (Fig 1.2c) If necessary, re-adjust the toes using the bubble level on the mount as a reference.

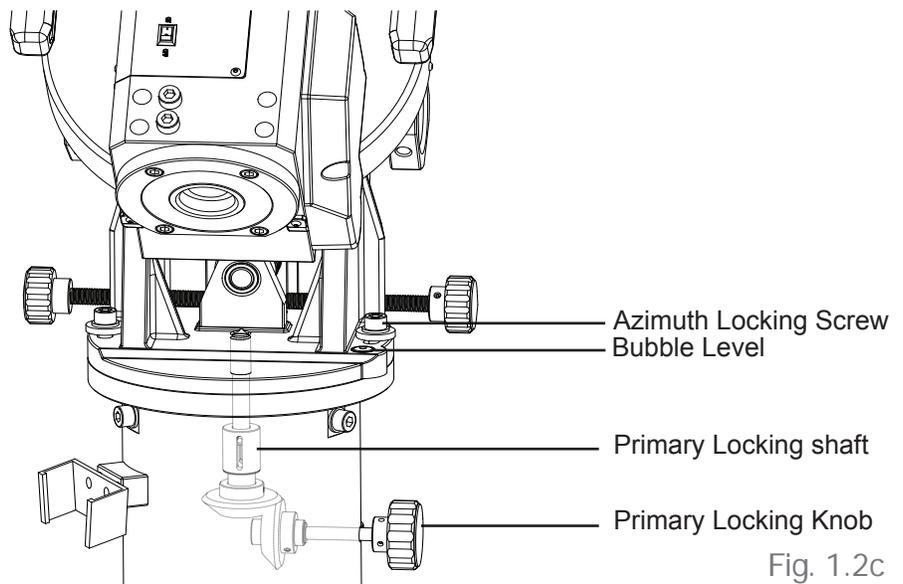


Fig. 1.2c

- Slide the jackscrew handle in the hole at the end of the latitude jackscrew's shaft. Apply two ball head screws on the handle. (Fig. 1.2d)

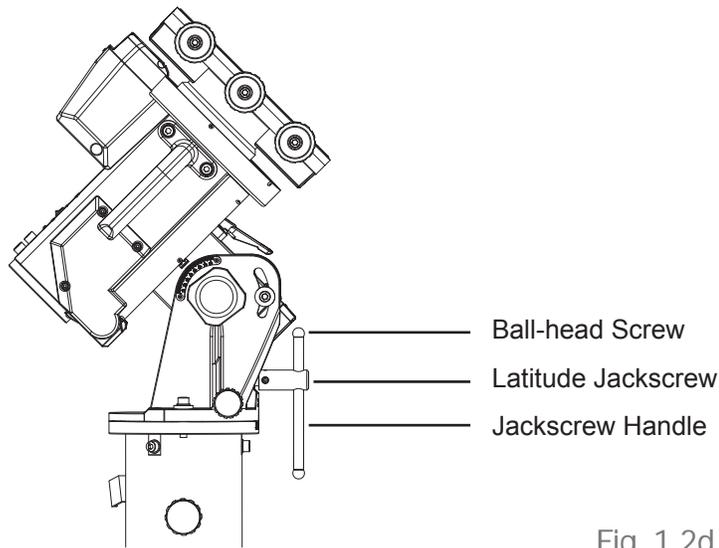


Fig. 1.2d

1.3 Installing the Counterweights

- Screw the counterweight rod into the mount as shown in Fig. 1.3a.
- Remove the stopper cap at the end of the counterweight rod.
- Loosen the counterweight's thumb screw and slide the counterweight onto the counterweight rod. Retighten the thumb screw to secure the counterweight on the rod. (Fig. 1.3b)
- Replace the stopper cap to the end of the counterweight rod.

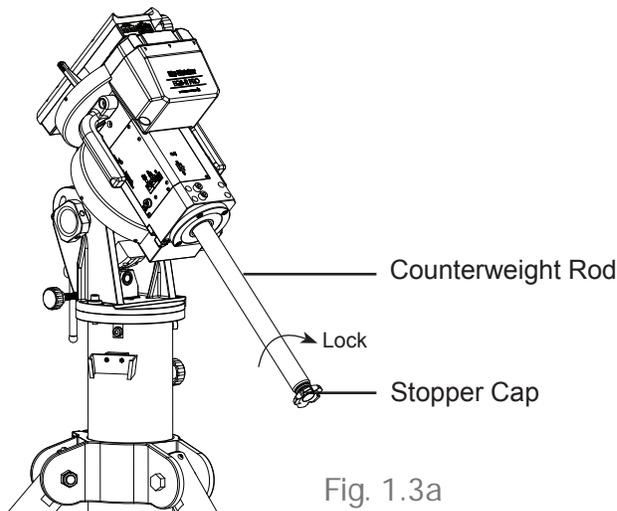


Fig. 1.3a

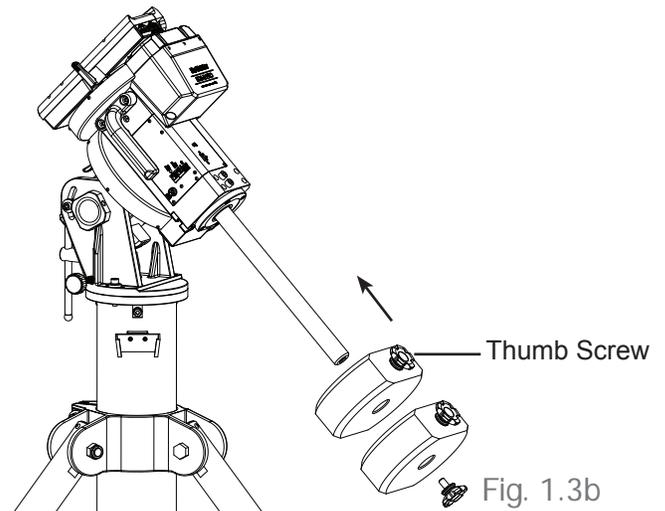


Fig. 1.3b

1.4 Installing the Telescope

- Before installing a telescope, ensure:
 - The counterweight rod is pointing towards the ground.
 - All counterweights have been moved to the end of the counterweight rod.
 - The R.A. axis is secured by tightening the R.A. Clutch Lever. (Fig. 1.4)

2. Release the Dec. clutch lever (Fig 1.4) and rotate the Dec. axis until the three knobs on the saddle are facing upward and the dovetail groove is leveled (Fig 1.4). Tighten the Dec. clutch lever again.

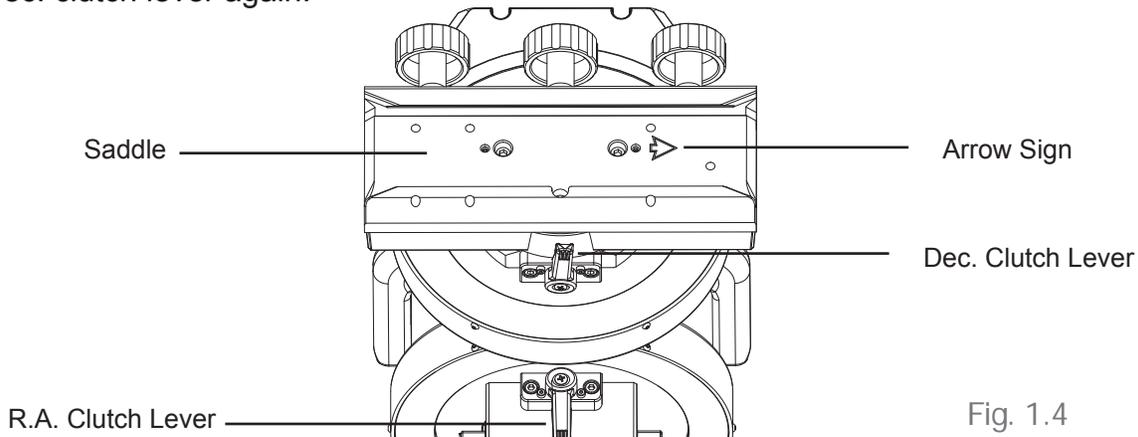


Fig. 1.4

3. Loosen the three knobs on the saddle alternately until the width of groove is slightly wider than the width of the dovetail bar on the telescope.
4. While holding the telescope horizontally, seat or slide the dovetail bar of the telescope into the groove of the saddle. The telescope should point in the direction of the arrow sign on the saddle (Fig 1.4).
5. Tighten the three knobs alternately to secure the dovetail bar in the groove.

Warning: Keep supporting the telescope until you are sure that it has been firmly attached to the saddle.

1.5 Balancing the Mount

Once the counterweight and the telescope have been installed, the mount should be balanced to reduce stress on the motor drive system, as well as to ensure smooth and accurate operation.

1. Loosen the R.A. clutch and rotate the R.A. axis until the counterweight rod is parallel to the ground. Tighten the R.A. clutch.
2. Loosen the Dec. clutch and rotate the Dec. axis until the telescope is parallel to the ground. Tighten the Dec. clutch.
3. Loosen the thumb screws on the counterweights.
4. Hold the counterweight rod with one hand, release the R.A. clutch and adjust the counterweights along the rod until the mount is able to remain stationary without support. Tighten the thumb screws on the counterweights again.
5. Rotate the R.A. axis; the mount should remain relatively balanced along different angles. Once this is confirmed, return the mount to its original position described in Step 1 and tighten the R.A. clutch again.
6. Hold the telescope with one hand and release the Dec. clutch.
7. Slowly let go of the telescope and check for any rotational movements. If there is a movement, slide the dovetail bar in the saddle to find a balancing position at which the telescope can remain stationary without support.

PART II : POLAR ALIGNMENT

Prior to operating the EQ8-R mount, it must be polar-aligned.

2.1 Prepare the Mount for Polar Alignment

1. Set up the EQ8-R mount, counterweights, and telescope as described in **PART I**. It is recommended to polar-align the EQ8-R mount with all equipment installed.
2. Loosen the primary locking knob and both azimuth locking screws; and then use the azimuth adjustment knobs to put the azimuth locking screws to the middle of the slots (Fig 2.1a). Tighten the azimuth locking screws slightly.

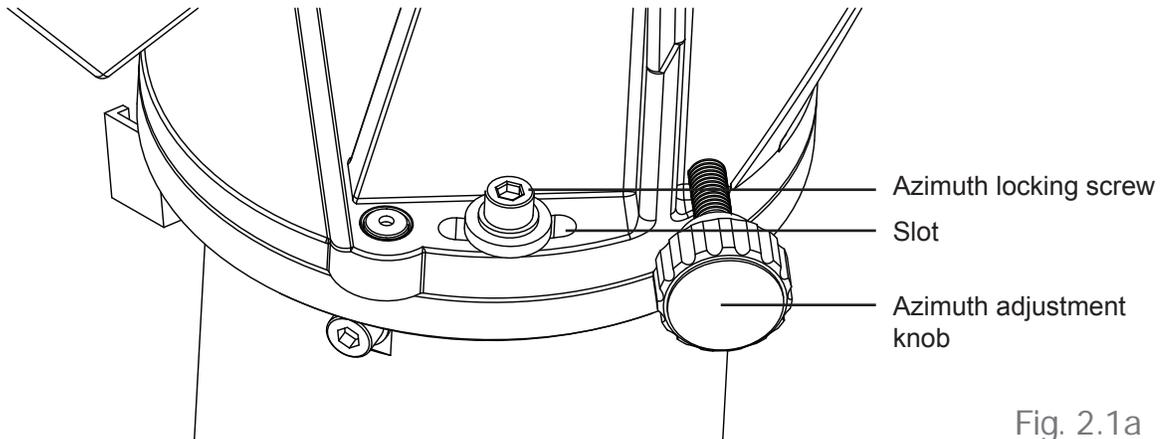


Fig. 2.1a

3. Loosen the fork gripping knobs and screws (Fig 2.1b) on both sides of the EQ8-R mount, and then tighten them slightly.
4. Tighten the primary locking knob and then loosen it by 1/4 of a turn.
5. Move the tripod to roughly align the R.A. axis to true north or south (for observing in southern hemisphere).
6. Install the handle on the latitude jackscrew and use it to set the latitude dial reading to local latitude (Fig 2.1b).

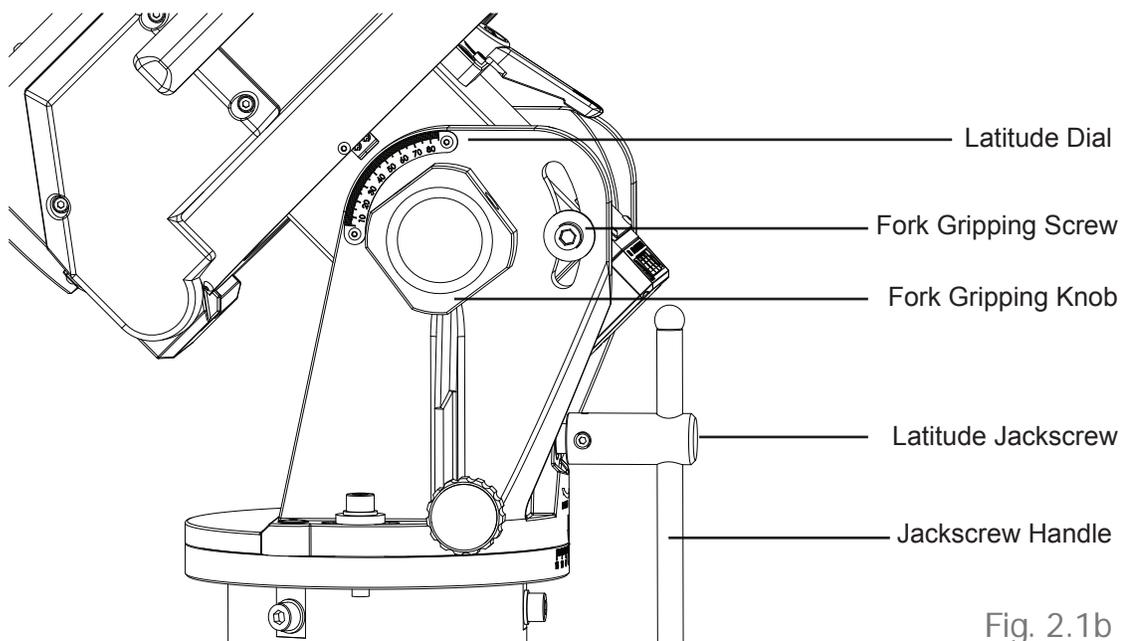


Fig. 2.1b

2.2 Based on Star Alignment

1. Use 2-Star alignment to align the mount by choosing two alignment stars with close declination, and then perform the polar-alignment routine. Repeat these operations several times until the polar alignment error reported after 2-Star alignment is small. Refer to SynScan hand controller's manual for detail operation instruction.
2. At the end of the polar-alignment routine, tighten the primary locking knob, and then tighten the azimuth locking screws and the fork gripping knobs and screws. User should observe the alignment star in the eyepiece while alternately tightening these symmetric knobs and screws; try to minimize the movement of the alignment star in the eyepiece.
3. It is recommended to remove the jackscrew handle after the polar-alignment has finished. This can prevent unexpected changes to the polar-alignment.

2.3 Based on Camera

Free software PHD2 and SharpCap provide camera based polar alignment functions. Please refer to their instruction manuals for details.

2.4 Based on the Optional Polar Scope


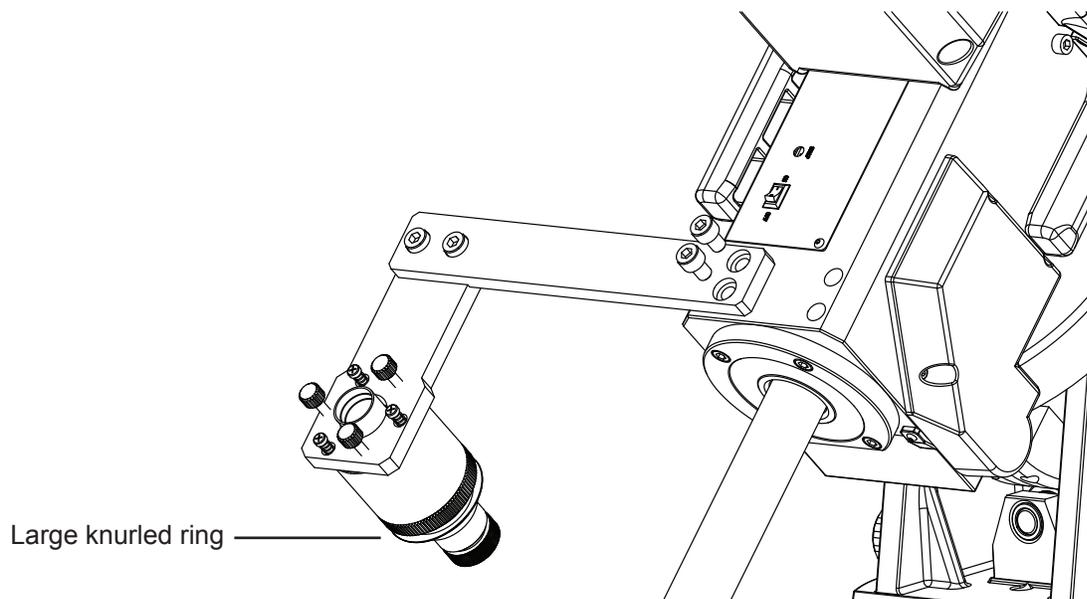


Fig. 2.3a

1. Install the polar scope assembly on the EQ8-R mount as shown in Fig 2.3a.
2. Verify whether the polar scope is aligned with the R.A. Axis. (Refer to the upcoming section “**Align the Polar Scope**”).
3. Use the SynScan Pro app (Menu “Advanced\Polar Scope”) to find the orientation of the Polaris or Octans in the FOV of a polar scope.
4. Use the latitude jackscrew and the azimuth adjustment knobs to move Polaris or Octans to the desired position in the FOV of the polar scope.
5. Tighten the primary locking knob, and then tighten the azimuth locking screws and the fork gripping knobs and screws.
6. It is recommended to remove the jackscrew handle after the polar-alignment has finished. This can prevent unexpected changes to the polar-alignment.

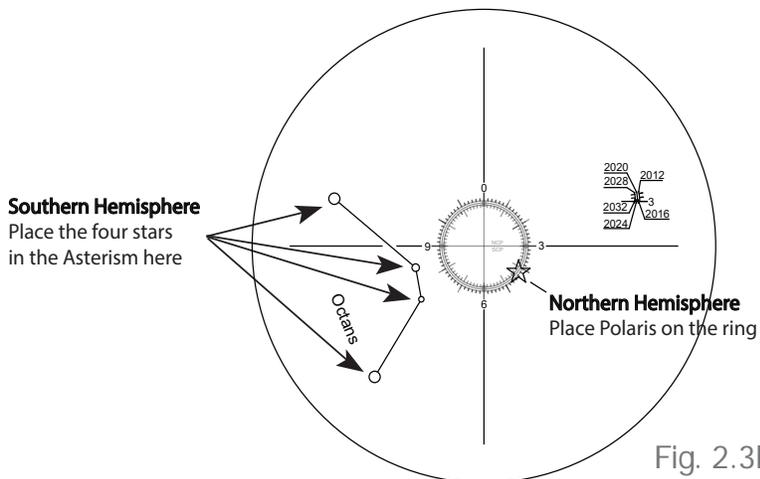

The left picture shows the pattern in the field of view (FOV) of the polar scope. If the image appears blurred, rotate the knurled ring of the polar scope's eyepiece to focus.

Fig. 2.3b

- **For observing in Northern Hemisphere:** Find the Polaris (The brightest star near the North Celestial Pole) in the polar scope; then use the jackscrew and the two azimuth adjustment knobs to move the Polaris to the proper position in the FOV of the polar scope.
- **For observing in Southern Hemisphere:** In the FOV of the polar scope, locate the 4 dim stars (Around Magnitude 5 to 6) which form the pattern like the “Octans” drawing in the polar scope (refer to Fig. 2.3b). Rotate the large knurled ring of the polar scope assembly to match the orientation of the “Octans” drawing to the 4 stars. Then use the jack screw and the azimuth adjustment knobs to move the 4 stars to the 4 small circles of the “Octans” drawing.

2.5 Align the Polar Scope

Before using the polar scope for polar alignment, the polar scope itself must be calibrated to ensure the pattern in the polar scope is aligned to the mount's R.A. axis. This includes two calibration routines:

Routine 1 - Align the pattern plate to the rotating axis of the polar scope

1. Choose a fixed object (the Polaris at night, or a far-away object in daytime); put the reticle in the FOV of the polar scope on the object by adjusting the two azimuth adjustment knobs and the latitude jackscrew of the EQ8-R mount. Tighten the R.A. axis.
2. Rotate the large knurled ring on the polar scope for exactly half a turn (Fig 2.5a).

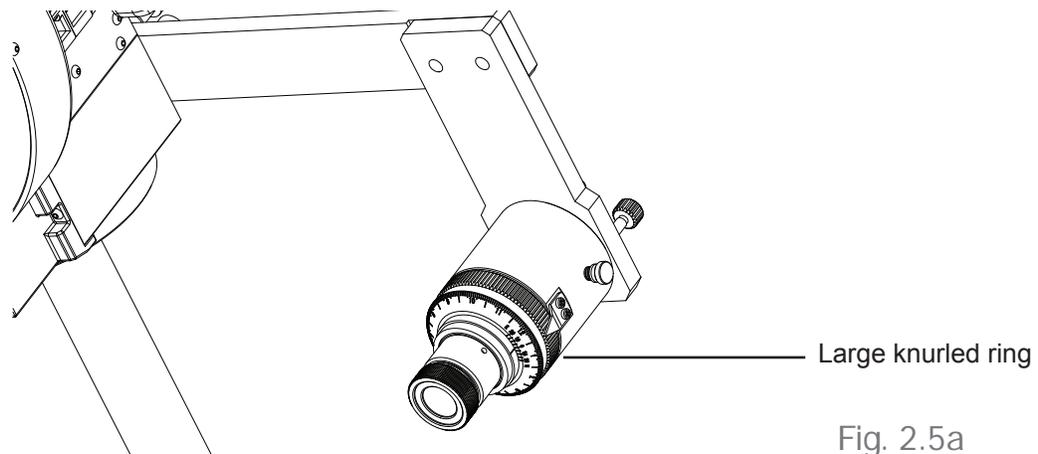


Fig. 2.5a

3. If the object remains at the center of the reticle in the polar scope after the rotation, then it means the polar scope's pattern plate has been aligned to the polar scope's rotating axis and no calibration is needed.
4. If the object deviates from the reticle, then use a 1.5mm Allen wrench to adjust the three small Allen screws on the polar scope (Fig. 2.5b) to eliminate the deviation to HALF. (Fig. 2.5c)

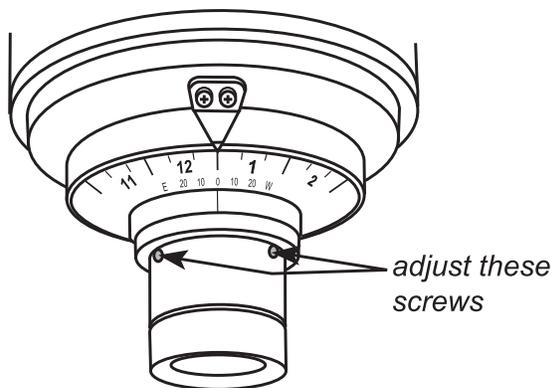


Fig. 2.5b

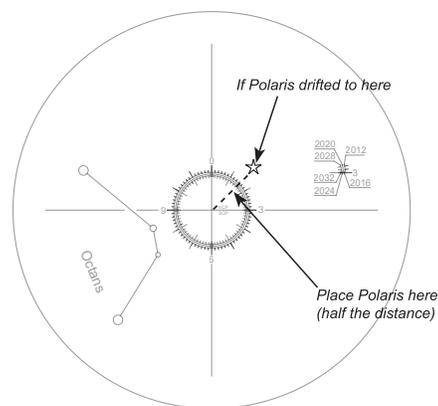


Fig. 2.5c

6. Repeat steps 1-4 a few times until the object keeps at the center of the reticle when rotating the mount in R.A. axis

Note:

- When adjusting the Allen screws, loosen one screw only $\frac{1}{4}$ of a turn, and then tighten the other two.
- Do not over tighten the Allen screws; it might damage the pattern plate in the polar scope.
- Do not loosen one screw completely or loosen more than one screw at a time; otherwise, the pattern plate in the polar scope will be disengaged and further adjustment is impossible.
- If the pattern plate does disengage, remove the polar scope's eyepiece by turning the knurled ring counterclockwise and then engage the pattern plate again.

Routine 2 - Align the rotating axis of the polar scope to the R.A. axis of the mount

1. Release the R.A. clutch and level the counterweight rod, then lock the R.A. clutch again.
2. Choose a fixed object (the Polaris at night, or a faraway object in daytime); put the reticle in the FOV of the polar scope on the object by adjusting the two azimuth adjustment knobs and the latitude jackscrew of the EQ8-R mount.
3. Rotate the mount in R.A. axis for half a turn exactly. Tighten the R.A. clutch after the rotation.
4. If the object remains at the center of the reticle in the polar scope after the rotation, then it means the polar scope's rotating axis has been aligned to the R.A. axis and no calibration is needed.
5. If the object deviates from the reticle, then adjust the three small adjustment screws as shown in Fig. 2.5d to eliminate the deviation to HALF.

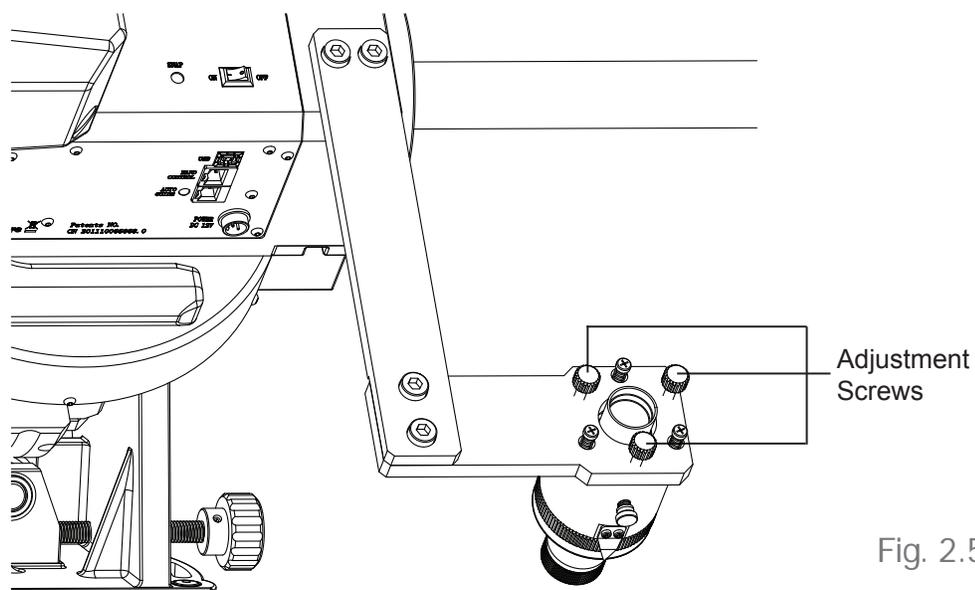


Fig. 2.5d

6. Repeat steps 1-5 a few times until the object keeps at the center of the reticle when rotating the mount in R.A. axis

PART III : ELECTRONIC CONTROL INTERFACE

3.1 Control Panel

The control panel of the EQ8-R Mount is shown below:

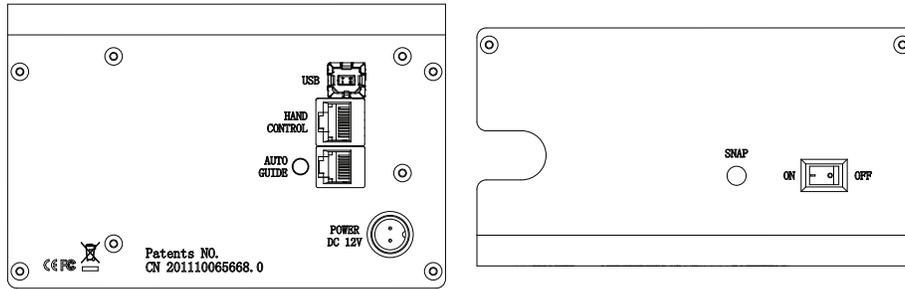



Fig. 3.1

3.2 Panel Interface Components:




**POWER
DC 12V**

POWER: This is an outlet from which the mount and the hand control get power supply. To connect to a power supply, align the index on both the plug of the cord and the outlet on the panel, and then insert the plug to the outlet. Tighten the knurled cap on the plug to secure the plug on the panel.



POWER Switch: Turns on and off the power to the mount and hand controller.

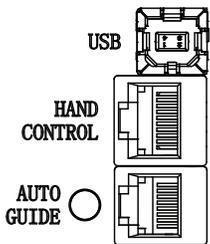

USB: It provides a USB-to-Serial connection for controlling the mount.

HAND CONTROL: This RJ-45 8-pins outlet is for connecting a SynScan hand controller or a SynScan Wi-Fi dongle.

AUTO GUIDE: This RJ-12 6-pins outlet is for connecting an autoguider. It is compatible with any autoguider with a ST-4 type interface.

LED: The LED beside the Autoguider port serves as a power-on/status indicator.

1. Steady on: Power voltage is normal.
2. Slow flashing: Power voltage is low; continuing to operate the mount may damage the battery (if a 12V lead-acid battery is in use).
3. Fast flashing: Power voltage is extremely low; continuing to operate the mount may damage the battery and the motor controller in the mount.
4. Intermittent one flash: The PPEC training routine has been triggered, but the controller in the mount has not received the worm index signal and the correction-recoding has not started yet.
5. Intermittent two flashes: The PPEC training routine has been started and the controller in the mount has received the worm index signal and started to record the PE correction. When the intermittent two flashes stops, it means the PPEC training has finished.
6. Intermittent, three flashes: Sidereal tracking with PEC is now enabled.

SNAP



SNAP: This is a stereo outlet for connecting to a camera's remote control port.

3.3 Pinout of the Interfaces:

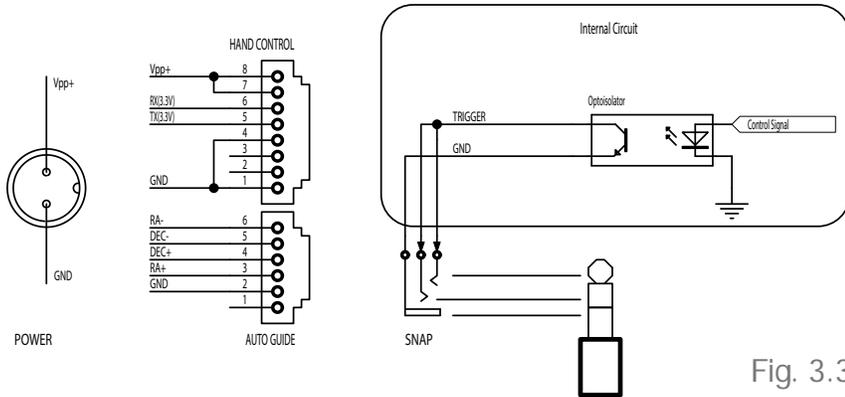


Fig. 3.3

Note:

- The SNAP port provides two trigger signals to the stereo plug. Some cameras need both “Shutter” and “Focus” signals.
- The camera control cable shipped with the EQ8-R mount is for a Canon EOS series DSLR camera. Cable for other cameras is optional and can be ordered separately.

3.4 Power Supply Requirements

- Output Voltage: DC 11V (minimum) to DC 16V (maximum), higher voltage is preferred. Voltage not in this range might cause permanent damage to the motor controller or the hand controller.
- Output Power: 55W (minimum).
- Do not use an un-regulated AC-to-DC adapter. A Skywatcher AC-to-DC switching power supply(13.7V/4A) for GOTO mount is highly recommended.
- If the power voltage is too low, the motor controller will stop the motors automatically.

3.5 Cable Management System

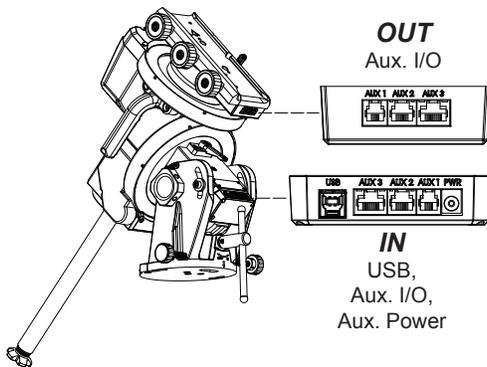


Fig. 3.5.1

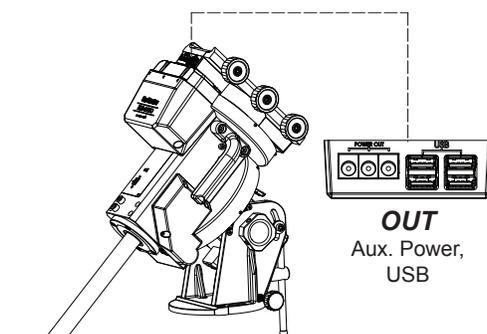


Fig. 3.5.2

- **IN - Auxiliary Power:**
 - 2.0mm I.D, 5.5mm O.D., central positive.
 - DC 6V to DC 24V, 5A.
 - It also powers the USB hub.
- **IN - USB:**
 - USB 3.0 Type B receptacle.
 - Recommend less than 1 meter cable length for USB 3.0 connection. Down-grade to a USB 2.0 cable if longer USB connection is needed.
 - Can drive the USB hub for less than 0.4A payload.
- **Auxiliary I/O:**
 - Straight connections for the paired RJ10, RJ12 and RJ45 modular jacks.
 - 0.5 A maximum current each pin.
- **OUT - Auxiliary Power:**
 - 2.0mm I.D, 5.5mm O.D., central positive.
 - 4A/Outlet, 4A in total.
- **OUT - USB:**
 - 4-Port USB 3.0 hub. Type A receptacle.
 - 0.9A/Port if powered by an auxiliary power supply.
 - 0.4A total output if powered by host USB port.

PART IV : EQ8-R MOUNT FEATURES

4.1 SynScan Telescope Control System

Our customers have the following options on controlling the EQ8-R mount:

- SynScan hand controller.
- SynScan Pro application for Windows (Free download from www.skywatcher.com) or SynScan Pro application for Android (Free download from Google Play), using built-in USB or optional SynScan Wi-Fi dongle.
- SynScan Pro app for iOS (Free download from App Store), using an optional SynScan Wi-Fi dongle.

All the above options support ASCOM telescope control platform.

4.2 Permanent Periodic Error Correction

The EQ8-R mount is equipped with an index on its R.A. worm so the motor controller can continue to track the current position of the worm. After a proper PEC training routine, in which the training data is stored in the motor controller permanently, a user can start the periodic error correction (PEC) at any time to improve the tracking performance for short focal length astrophotography. A training process is not required in the next observing session (assuming that the polar alignment is always accurate), thus this is a Permanent Period Error Correction (PPEC). A user can train the mount with manual guiding or auto-guiding. For detailed instructions, please refer to the relevant section in the SynScan hand controller instruction manual.

4.3 Batch Exposures Function

The EQ8-R mount is equipped with a SNAP port which can control the shutter release of a camera. Working with the SynScan hand control's "Camera Control" function, a user can take batch exposures when doing astrophotography. Up to 8 groups of "Exposure-time & Frames" combinations can be set on the SynScan hand controller. For detailed information, refer to the SynScan hand control's instruction manual.

4.4 Auto-Home Function

The EQ8-R mount is equipped with two home position sensors. Working with the SynScan hand controller, the mount can be placed to the same home position after turning on the power. For detailed information, refer to the SynScan hand control's instruction manual.

4.5 High Resolution Encoder


The **EQ8-RH** mount is equipped with a Renishaw's high resolution incremental encoder on its R.A. axis. It helps to reduce/eliminate the influence of mechanical periodic error while the mount is tracking an object for astrophotography.

4.6 Hard Stops


To protect mechanical parts, OTA and internal wiring, the EQ8-R mount has internal hard stop for both R.A. axis and declination axis.

APPENDIX: DIMENSIONS


Dimensions:

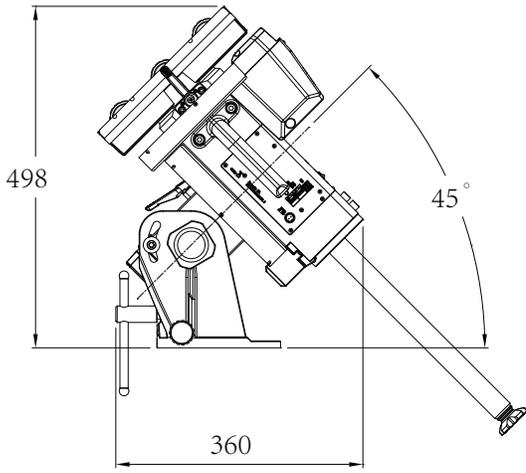


Mount

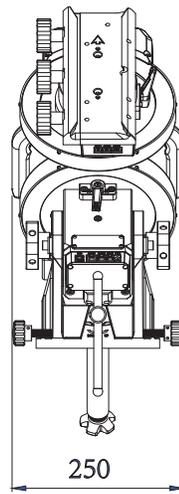


Mount

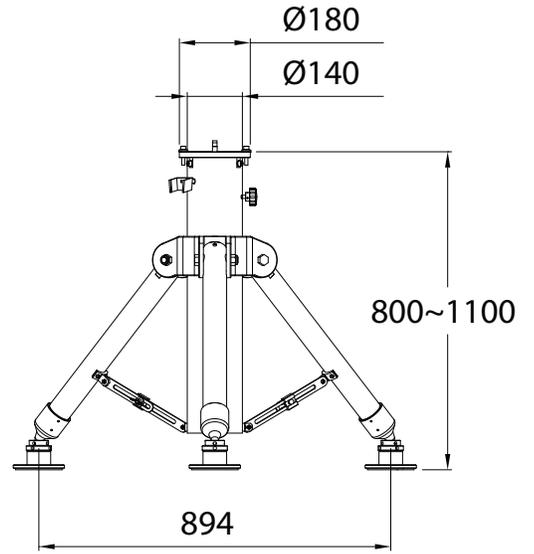

Tripod

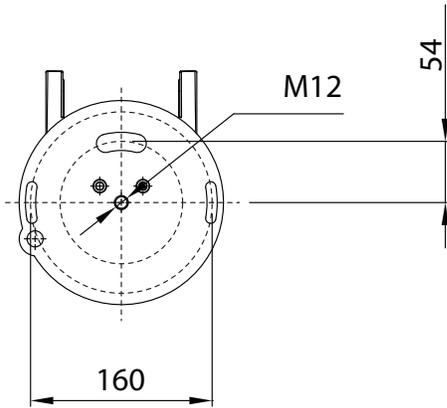

Mount Bottom Plate

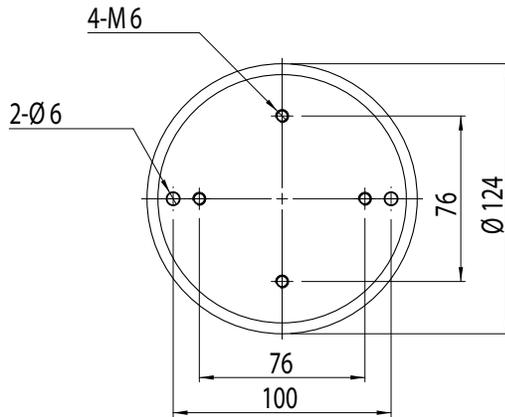

Saddle Head

APPENDIX: SPECIFICATIONS

Specifications:

Product Name	EQ8-R Mount EQ8-RH Mount (with high resolution R.A. encoder)
Mount Type	German Equatorial Mount
Payload (Rated for astrophotography; counterweights excluded)	50kg
Latitude Adjustment Range	10° to 65°
Azimuth Adjustment Range	±10 °
Weight (Tripod excluded)	25.8 kg
Counterweight	2 x 10kg/ea.
Tripod	29.4kg
Counterweight Rod	2.6kg
Power Requirement	DC11~16V(Higher voltage preferred), 55W
Motor	0.9 ° Hybrid Stepper Motor
Transmission	435:1 Worm Drive 256 Micro-step/0.9° Stepper Motor Drive
Gear Ratio	435
Resolution	44,544,000 Counts/Rev., approx. 0.03 arc-second
Maximum Slewing Speed	3.7 degrees/second
Tracking Rate	Sidereal rate, solar rate, lunar rate
Tracking Mode	Equatorial mode
Auto-guiding Speed	0.125X, 0.25X, 0.5X, 0.75X, 1X
PEC	200 Segments Permanent PEC
GOTO Controller	SynScan hand control, SynScan Pro App
Database	42000+ Objects
Celestial Object Catalog	Messier, NGC, IC, SAO, Caldwell, Double Star, Variable Star, Named Star, Planets
Pointing Accuracy	Up to 5 arc-minutes (RMS)
Resolution of R.A. High Resolution Encoder (Optionl, available on EQ8-RH Only)	11,840,000 Counts/Rev., approx. 0.11 arc-second from Renishaw

Note: The above specifications may be changed without advance notice.

EQ8-R Mount



NEVER USE YOUR TELESCOPE TO LOOK DIRECTLY AT THE SUN. PERMANENT EYE DAMAGE WILL RESULT. USE A PROPER SOLAR FILTER FIRMLY MOUNTED ON THE FRONT OF THE TELESCOPE FOR VIEWING THE SUN. WHEN OBSERVING THE SUN, PLACE A DUST CAP OVER YOUR FINDERSCOPE OR REMOVE IT TO PROTECT YOU FROM ACCIDENTAL EXPOSURE. NEVER USE AN EYEPIECE-TYPE SOLAR FILTER AND NEVER USE YOUR TELESCOPE TO PROJECT SUNLIGHT ONTO ANOTHER SURFACE, THE INTERNAL HEAT BUILD-UP WILL DAMAGE THE TELESCOPE OPTICAL ELEMENTS.